



Elf™ Attachable Handle

The Elf handle can be attached to the Elf and provides an additional trigger for scanning.
The Elf handle fits with every battery packs and with every Elf docks (Single Slot Dock, Four Slot Dock, Powered Mobile Dock).
When you remove the handle, you no longer have the trigger on the handle and must use the <Scan> key on the keypad or Scan triggers on the PDA instead.



NOTE


When the handle is attached to the Elf, the camera cannot be used

822001010

INSTALLING THE HANDLE

To install the handle, refer to the following. Reverse the instructions to remove the handle.

1. Remove the handstrap
2. Push the top of the handle into place against the PDA pivot nut
3. Tighten the two captive screws* with a screwdriver to fix the handle to the PDA body
4. Press the trigger to initiate scanning.

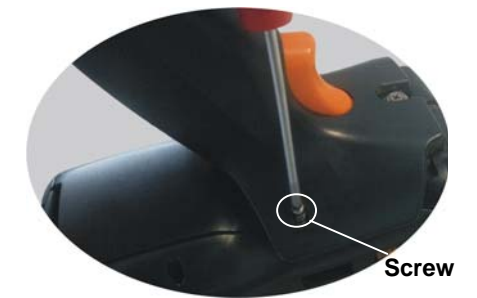

The Elf handle is also supplied with a backup pivot nut which can replace the pivot nut supplied with the Elf.



* the captive screws are loosely held in place and cannot separate from the handle.